 


TELESIN

Floating Tripod Selfie Stick

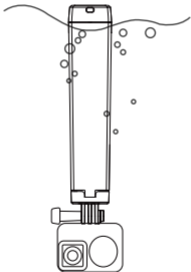

User Manual

Preface

Thank you for purchasing a Telesin product. Please read this user manual carefully before use.

⚠ Important Notes

 
- Please keep this user manual properly. When handing over the product to others, be sure to include this user manual.
- Pay attention to all warnings and follow all instructions in the user manual.
- **After using the product in a seawater environment:**
 - First, soak it in fresh water for 10 minutes;
 - After removing the product from fresh water, rinse it under gentle running tap water for 5 minutes.
 - After washing, wipe away any water droplets remaining on the surface with a soft, dry cloth and leave to dry. Do not dry with a hair dryer or any other heat source.
 - Store the product in a dry, well-ventilated location.
- This product supports floating devices up to 200 grams. Heavier devices may cause instability due to adapter material factors. It is recommended to use plastic adapters or pair with a waterproof case for the main unit.
- **Installing a waterproof case will increase the buoyancy of the device, which may affect its original floating state.**
- Do not disassemble or damage this product. If it becomes deformed or damaged, stop using it immediately.
- Do not drop the product or use it under high temperatures.
- Keep this product out of reach of children.
- The waterproof depth of this product is 30 meters.

⚠ Warnings

Do not disassemble the product. If you suspect any problem with the product, contact the purchase platform for after-sales service.


Extend the pole

- ①: Twist the pole anti-clockwise to unlock the 3 telescopic stages.
- ②: Extend the pole to 3 stages when unlocked.
- ③: Twist the pole clockwise to lock 3 stages and make the pole locked, safe and secure.

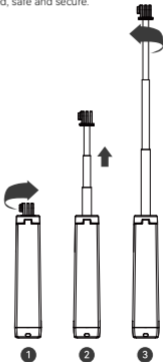


Install Action Camera

 Insert the screw on the flat side of the mount. Rotate the screw clockwise until it is tightened to the threaded nut.

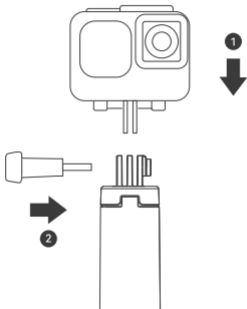


Foldable Legs

 Extend the legs of the tripod outward, and repeat the above steps until the other legs are also unfolded and fixed.

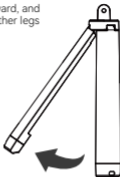

Attach Wrist Strap

 Pinch the small end string of the lanyard. Slide the opposite end of the lanyard through the loop and pull to tighten.

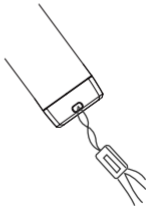

Product Parameters

Material: ABS+Aluminum

Weight: 145g

Color: Black & Orange

Folded Size: 220 mm

Stretching Size: 610 mm

Other Information

Shenzhen Telesin Digital Co., Ltd.

Address: Bantian Street, Longgang District, Shenzhen,
Guangdong, China Room 526.5/F, Block B, Paradiso
Building, Vanke City Community

Service hotline: 86-755-32947086

Implementation standards: GB/T 26125-2011

Disclaimer

Please read this statement carefully and by using this product you will be deemed to have acknowledged and accepted it in full. Please check the product carefully before each use and do not use it if damaged or deformed. By using this product, you acknowledge and agree that you are fully responsible for your actions and the possible consequences of using this product. You undertake to use this product only for legitimate and lawful purposes. You understand and agree that ("Telesin") shall not be liable for any misuse, adverse effects, damages, injuries, penalties or other legal consequences arising directly or indirectly from the use of this product. The user should follow the precautions including but not limited to those mentioned herein. To the extent, Telesin reserves the right to interpret and modify this commitment within the limits of national laws and regulations. The warranty period for TELESIN products begins 6 months on the day you receive the product.