TELESIN 泰迅

TELESIN

For HERO 12/11/10/9/8

Underwater Selfie Stick with Remote Control

QUICK STAR GUIDE

Preface

Thank you for purchasing a Telesin product. Please read this user manual carefully before use.

Important Notes

- Please keep this user manual properly. When handing over the product to others, be sure to include this user manual.
- Pay attention to all warnings and follow all instructions in the user manual.
- **After using the product in a seawater environment:**
  - **First, shake off the seawater from the selfie stick;**
  - **Then soak it in fresh water for 10 minutes;**
  - **After removing the product from fresh water, rinse it under gentle running tap water for 5 minutes.**
  - **After washing, wipe away any water droplets remaining on the surface with a soft, dry cloth and leave to dry. Do not dry with a hair dryer or any other heat source.**
  - **Store the product in a dry, well-ventilated location.**
- Do not disassemble or damage this product. If it becomes deformed or damaged, stop using it immediately.
- Do not cover the product with items like towels or clothes during charging to prevent fire hazards.
- Do not drop the product or use it under high temperatures or short-circuit conditions.
- Keep this product out of reach of children.
- The product has passed the waterproof test of GB/T 4208-2017 and IEC 60529-2013 enclosure protection rating standard IP68. It is not recommended to use the product in extreme water environments or unknown liquid environments. Do not use it in hot springs or corrosive liquids.
- The product is only compatible with HERO 12/11/10/9/8 models.
- The waterproof depth of this product is 30 meters.

Warnings

Do not disassemble the product or replace the battery. If you suspect any problem with the product, contact the purchase platform for after-sales service.

Installation and Connection

1. Mount the action camera onto the selfie stick. If diving deeper than 10 meters, use a waterproof case (not included in the package).

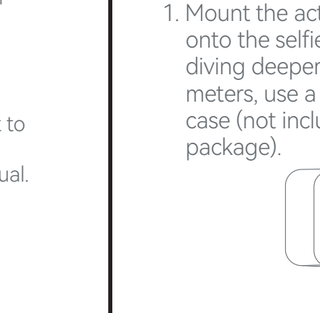

2. Open the action camera remote connection interface and click "Connect with the remote" (the connection interface may vary by model, please refer to the user manual of the corresponding model).

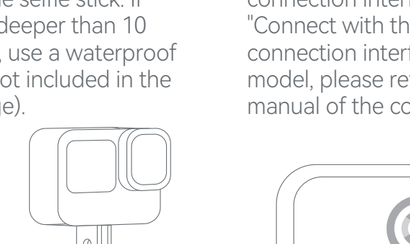

3. Press and hold the power button on the selfie stick for 3 seconds to turn it on and automatically search for signals.

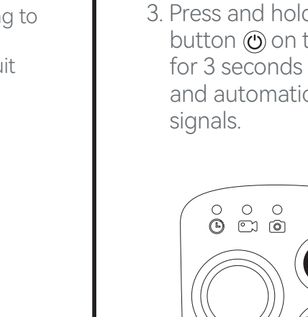

4. Before the Bluetooth connection is established, all three indicator lights will light up and flash simultaneously;

◐ ◐ ◐

Once connected successfully, the indicator light of the corresponding mode will light up.

○ ● ○

(Complete the connection within 2 minutes, or the remote will automatically shut down).

Functions



1. Switch Shooting Mode
Press the mode button (M) to switch between camera time-lapse, video, or photo mode. The status light of the corresponding mode will light up when switching.
2. Start Shooting
Press the shooting button to start shooting, press the shooting button again to end shooting.
3. Remote On/Off
Each time you press and hold the power button, you can remotely turn the camera on or off synchronously.
4. Reset Pairing
Press and hold the mode button (M) for 3 seconds to reset pairing.

Indicator Light Instructions * Note: ● remain on, ◐ flash, ○ not on.

Connection Status	Lamp Display Status	Lamp Display Meaning
Bluetooth connection before	Three lights will remain on and flash together.	◐ ◐ ◐
Bluetooth connection	Indicator light will remain on	○ ● ○
During shooting	Indicator light will flash	○ ◐ ○

Electric charge state	Lamp Display Status	Lamp Display Meaning
Indicates the current battery level is below 33%. Please charge promptly.	One light flashing	◐ ○ ○
Indicate the current battery level is below 66%	Two lights flashing	◐ ◐ ○
Indicate the current battery level is below 99%	Two lights flashing	◐ ◐ ○
When fully charged	Three lights will remain on	● ● ●
At the lowest battery level	The indicator light will begin flashing slowly from the leftmost light. Please charge promptly at this time	◐ ◐ ◐

Charging

Use the included charging cable for charging, connect the contact end to the charging port on the left side of the selfie stick, and connect the other end of the charging cable to a USB power source.

Charging time: 1 hour
Battery capacity: 70 mAh
Input: Pogo Pin Connector

*Data measured by Telesin laboratory, slight deviations may occur due to changes in objective conditions.

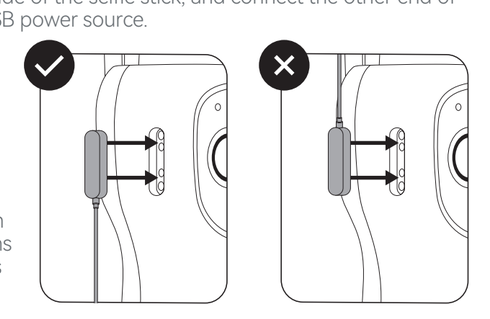

Warning

Hazard warnings:
A product that contains button or coin batteries must display a warning message:
"Warning: Contains button or coin cell battery. Hazardous if swallowed – see instructions"
"Keep out of reach of children. Swallowing can lead to chemical burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately."
All electric toys using replaceable button or coin batteries shall state the following warning in the instructions:
"Warning: Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention."

FCC Caution

15.19 Labelling requirements.
This device complies with part 15 of the FCC Rules. Operation is subject tthe following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any innterference received, including interference that may cause undesired operation.
15.21 Information to user.
Any Changes or modifications not expressly approved by the partyresponsible for compliance could void the user's authority to operate the equipment.
15.105 Information to the user.
Note: This equipment has been tested and found to comply with the limitsfor a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againarmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harnnful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit differentt from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

IC Caution

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:
(1) This device may not cause interference;
(2) This device must accept any interference, including interference that may cause undesired operation of the device.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux apparei ls radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radicpélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
L'appareil a été évalué pour répondre aux exigences générales d'exposition Rf. L'appareil peut être utilisé dans des conditions d'exposition portables sans restriction.

Disclaimer

Please read this statement carefully and by using this product you will be deemed to have acknowledged and accepted it in full. Please check the product carefully before each use and do not use it if damaged or deformed. By using this product, you acknowledge and agree that you are fully responsible for your actions and the possible consequences of using this product.You undertake to use this product only for legitimate and lawful purposes. You understand and agree that Telesin Digital Co.,Ltd ("Telesin") shall not be liable for any misuse, adverse effects, damages, injuries, penalties or other legal consequences arising directly or indirectly from the use of this product. The user should follow the precautions including but not limited to those mentioned herein. To the extent Telesin reserves the right to interpret and modify this commitment within the limits of national laws and regulations.
*The warranty period for TELESIN products begins 6 months on the day you receive the product.

TELESIN

适配 HERO 12/11/10/9/8

水下遥控自拍杆

快速操作指南

前言

感谢您购买 Telesin 产品，使用期请认真阅读本用户手册。

重要提示

- 请妥善保管用户手册。将产品交给他人使用时，请务必附带本用户手册。
- 请注意所有警告提示并遵循用户手册内的所有指令。
- **在海水环境中使用产品后：**
  - **请先甩干自拍杆内海水；**
  - **然后将其放入清水（淡水）中浸泡 10 分钟；**
  - **从淡水中取出产品后，在柔和流动的自来水中进行冲洗 5 分钟；**
  - **清洗产品后，用干毛巾擦去产品表面上残留的水滴。请勿使用烘干机或炉子进行烘干；**
  - **请将产品存放在干燥、通风良好的场所。**
- 请勿拆卸或损伤本产品，若变形或被破坏，请立即停止使用。
- 在充电过程中，请勿用如毛巾、衣服之类的物品将产品掩盖，避免导致火警。
- 请勿跌落或在高温、短路情况下使用本产品。
- 请将本产品放置在儿童不能接触的地方。
- 产品均通过了 GB/T 4208-2017 和 IEC 60529-2013 外壳防护等级标准 IP68 防水测试。极端水环境、不明液体环境中不建议使用本产品，在温泉、腐蚀性液体中请勿使用。
- 产品仅适配机型为 HERO 12/11/10/9/8。
- 本产品的防水深度为 30 米。

警告

请勿拆卸产品或更换电池，如您怀疑产品有任何问题，请联系购买平台，申请售后处理。

安装连接

1. 将运动相机安装到自拍杆上。如潜水深度大于 10 米，请搭配防水壳使用。（套装中不包含防水壳）

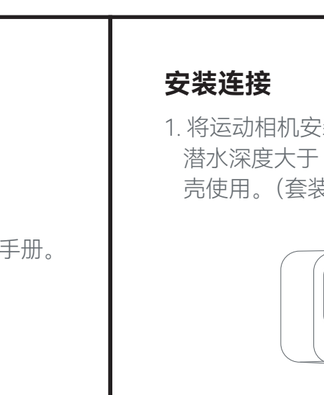

2. 打开运动相机遥控器连接界面，点击连接 "The Remote"。（不同型号连接遥控器界面不一样，请参考主机对应型号的说明书）

3. 长按自拍杆上开关机按钮"⏻"3 秒，开机并自动搜寻信号。

4. 在蓝牙未连接上前，三颗指示灯同时亮起并闪烁；

◐ ◐ ◐

连接成功后，对应模式下的指示灯亮起。

○ ● ○

（请在 2 分钟内完成连接，如未完成，遥控器会自动关机）

功能介绍

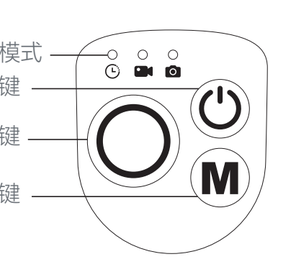

1. 切换拍摄模式
按压模式键 (M) 切换相机延时、录像或拍照模式。切换时，对应模式的状态灯亮起。
2. 开始拍摄
按压拍摄键 开始拍摄，再次按压拍摄键 结束拍摄。
3. 遥控开关
每次长按开 / 关键 可遥控相机同步开关。
4. 重置配对
长按模式键 (M) 3 秒，重置配对。

灯显提示 *注意：● 为常亮 ◐ 为闪烁 ○ 为不亮

连接状态	灯显状态	灯显示意
蓝牙未连接前	三颗灯同时亮起并闪烁	◐ ◐ ◐
连接后	对应模式的灯常亮	○ ● ○
拍摄时	对应模式的灯闪烁	○ ◐ ○

电量状态	灯显状态	灯显示意
表示当前电量低于 33% 请您及时充电	一颗灯闪烁	◐ ○ ○
表示当前电量低于 66%	两颗灯闪烁	◐ ◐ ○
表示当前电量低于 99%	两颗灯闪烁	◐ ◐ ○
充满电时	三颗灯常亮	● ● ●
最低电量时	指示灯从最左侧开始连续慢闪，此时请您务必及时充电	◐ ◐ ◐

充电

使用配套充电线进行充电，触点端连接自拍杆左侧充电口，将充电线的另一端连接到 USB 电源。

充电时间：1h
电池容量：70 mAh
输入：触点充电

* 数据由 Telesin 实验室测定值，但因客观环境改变，数据略有偏差。

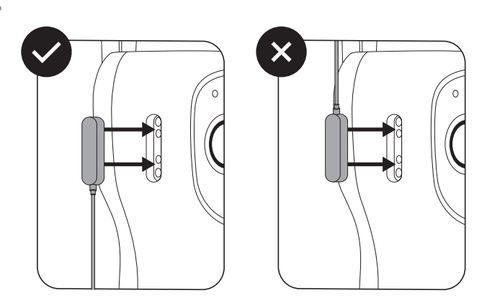

免责声明

请仔细阅读本声明，一旦使用本产品，即视为对本声明的全部认可和接受。每次使用前，请仔细检查产品，若出现破损、变形，请勿使用。使用本产品，就意味着您认可并同意，您将对使用本产品的行为和可能产生的后果负全部责任。您承诺仅会出于正当合法的目的使用本产品。您理解并同意，对于直接或间接因使用本产品而造成的滥用、不利影响、损害、伤害、惩罚或者其他法律后果，泰迅数码有限公司（以下简称"Telesin"）将不承担任何责任。用户应遵循包括但不限于本文提及的使用注意事项。在国家法律法规范围内，本承诺解释权、修改权归 Telesin 所有。
泰迅保修期从您收到货物后的当日起计算，享有 6 个月保修服务。

www.telesin.com

产品SKU:
GP-WBT-001

产品名称:
水下遥控自拍杆

物料代码:
ZK

物料名称: 说明书

材　　质: 86g铜版纸
黑白双面印刷，折页

工　　艺:

尺　　寸: 75x100mm

制 图 人: 江虾仔

制图时间: 20240614

卡纸类生产检验标准

1. 包装盒尺寸允许误差范围±1mm。
2. 模切整齐，无爆边，无皱角，爆角。
3. 印刷清晰，颜色准确，无色系偏差，无墨点，脏污，允许走位±1.5mm。
4. 粘贴位齐平，无残胶，溢胶。
5. 划痕允许范围：A级面：无触感L≤20mm，w≤0.5mm，QTY≤1mm可接受，B级面：无触感L≤30mm，w≤1mm，QTY≤2mm可接受。

包装未注尺寸公差:

1. 外箱/纸板未注公差：±3mm
2. 彩盒纸类未注公差：±1mm
3. 吸塑未注公差：±0.5mm
4. 丝印/雕刻纸板未注公差：±0.2mm
5. 泡棉未注公差：±0.5mm
6. 布包未注公差：±1mm

深圳市泰迅数码有限公司
标准制表版本号: TX20240127